


QUICK START MANUAL

Please follow the steps respectively to get the panel ready to use.

The recommended type of connection is as follows:

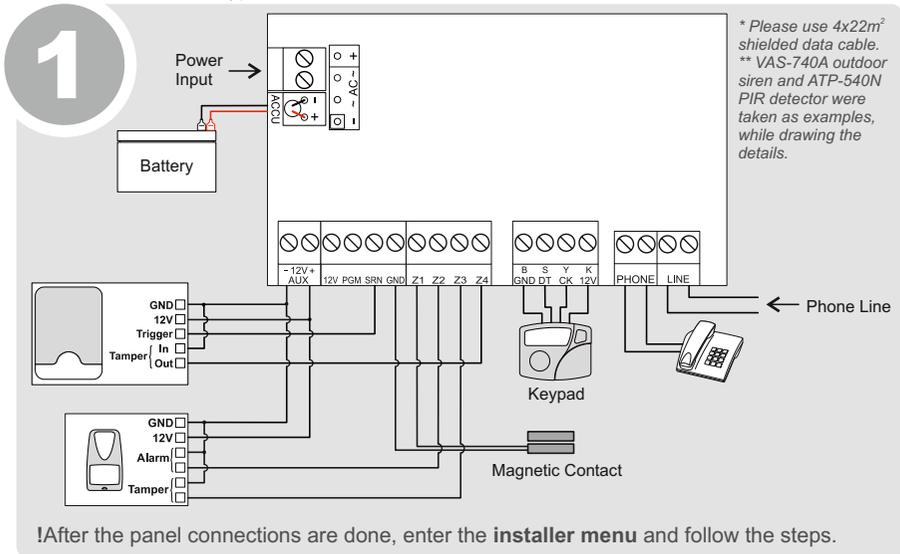

NOTE: **5** The buttons which are filled as shown, must be pressed until the long "beep" heard.

2 ACCESSING INSTALLER MENU

I. Press **4** (Program) until you hear the long "beep" sound.

II. Enter 4 digit installer password (Factory default: 9999).

Press the buttons **9 9 9 9** You will hear double "beep" sound as confirmation. "Program" LED will light, "Ready" LED will flash.

3 BASIC SETTINGS

A. Date/time settings

♦ Time settings

I. Press the buttons **0 1 0 1**

II. Enter the time as **hour** and **minute**, each consists of 2 digits. Then press confirmation

button "√" to approve. **Example:** To set current time as 9:12 press the buttons respectively.

0 1 0 1 0 9 1 2 √

♦ Time settings

I. Press the buttons **0 1 0 2**

II. Enter the date as current **day**, **month**, **year**, each consists of 2 digits. Then press

confirmation button "√" to approve. **Example:** To set current date 14.03.2010 press the

buttons respectively. **0 1 0 2 1 4 0 3 1 0 √**

5

B. Entry delay

If any of the zones in any partition is selected as entry zone, in "Zone settings" menu you can adjust the time which is given to a user for entry and exit.

I. Press the buttons **0 2 0 1**

II. Factory default of entry delay is 15 seconds. Set this value between 0-255 (in seconds), then press confirmation button "√" to approve. **Example:** To set entry delay time to "28" seconds press the buttons respectively. **0 2 0 1 2 8 √**

6

C. Exit delay

If any of the zones in any partition is selected as exit zone. In "Zone settings" menu you can adjust the time which is given to a user for exit.

I. Press the buttons **0 3 0 1**

II. Factory default of entry delay is 15 seconds. Set this value between 0-255 (in seconds), then press confirmation button "√" to approve. **Example:** To set entry delay time to "9" seconds press the buttons respectively. **0 3 0 1 9 √**

7

D. Central monitoring station (CMS) account numbers

If your panel will call a central monitoring station, the 4 digit account number must be entered to the following address.

I. Press the buttons **0 4 0 1**

II. Enter your 4 digit account number, then press confirmation button "√" to approve.

* If account number includes letter characters like A,B,C for A press 1; For B press 2; For C press 3; For D press 4; For E press 5; For F press 6 until you hear long "beep" sound.

Example: To enter account number as 43E1, press the buttons respectively.

0 4 0 1 4 3 5 (Press "5" until you hear long "beep" sound) **1 √**

8

E. Central monitoring station (CMS) phone numbers

♦ Central monitoring station (CMS) main phone number

If the panel will be connected to a central monitoring station, enter the main CMS phone number. To clear the current phone number, press "0" until you hear long "beep" sound at the same address (0,5,0,1).

I. Press the buttons **0 5 0 1**

II. Enter the phone number including the empty space as 15 characters maximum, then press confirmation button "√" to approve. **Example:** To enter CMS phone number as 02161234567 press the buttons respectively.

0 5 0 1 0 2 1 6 1 2 3 4 5 6 7 √

9

♦ Central monitoring station (CMS) secondary phone number

If the panel can not have a successful call with the main number, it will start to call secondary number. To clear the current phone number, press "0" until you hear long "beep" sound at the same address (0,5,0,2).

I. Press the buttons **0 5 0 2**

II. Enter the phone number including the empty space as 15 characters maximum, then

press confirmation button “√” to approve. **Example:** To enter the secondary phone number of CMS as 02161234567 press buttons respectively.

0 5 0 0 1 0 2 1 6 1 2 3 4 5 6 7 ✓

10

F. User phone numbers

On alarm conditions and other events these phone numbers are called by the panel. Starting from address **0601; 0602; 0603;...0606** you can enter 6 different private phone numbers on these 6 addresses. To clear current phone number, in the same address (0,6,0,1) press "0" until you hear long "beep" sound.

I. Press the buttons 0 6 0 1

II. Enter the phone number including the empty space as 15 characters maximum, then press confirmation button “√” to approve. **Example:** To enter the first user phone number as 02161234567 press the buttons respectively.

0 6 0 1 0 2 1 6 1 2 3 4 5 6 7 ✓

Example: If you need to route an exterior line with 9, first of all press "0,6,0,2" then press "9". Then leave a space (to enter space press "0" until you hear long "beep" sound) and enter the phone number (02161234567) which is given below.

0 6 0 2 9 0 (Press "0" until you hear long "beep" sound)
0 2 1 6 1 2 3 4 5 6 7 ✓

11

PASSWORD SETTINGS

A. Changing master and installer password

Master and installer passwords don't require any addresses. Factory default value for master password "1234" and for installer password "9999". You can change the passwords as following.

I. Press “√” until you hear long "beep" sound.

II. Enter your 4 digit old password, 4 digit new password and re-enter new password, then press confirmation button “√” to approve. (For VPC104 you don't need to press any buttons to approve, as confirmation you will hear double "beep" sound.) **Example:** To change master password from "1234" to "9876" press the buttons which is given below.

✓ (Press "√" until you hear long "beep" sound) 1 2 3 4 9 8 7 6 9 8 7 6 ✓

12

B. Assigning a new user password

You can access user passwords only from master menu. To assign new user passwords, first you have to exit installer menu and enter master menu. To exit installer menu, press "x" (exit) button until you hear a long "beep". On the keypad "program" LED will flash.

◆ Entering master program

I. Press 4 (program) until you hear long "beep" sound.

II. Enter 4 digit master password, you will hear double "beep" sound.

13

◆ Entering new user password

I. Press the buttons 0 7 0 1

II. Enter 4 digit user password as you wish, to approve press “√”. For the second

user password "0,7,0,2"; for the third "0,7,0,3"... for the fifth "0,7,0,5" addresses are used.
Example: To set the fourth password as 4321 press the buttons given below respectively.

0 7 0 4 4 3 2 1 ✓

14 TESTS

To check the system is working fine or not, siren, user phone call, central monitoring station phone call tests can be done. All tests can only be done when panel is not armed.

A. Siren test

- I. Press "8" (test) until you hear long "beep" sound.
- II. Press 3 and 1. Siren will ring for 5 seconds.

8 (Press "8" until you hear long "beep" sound) 3 1

15 B. User phone call test

- I. Press "8" (test) until you hear long "beep" sound.
- II. Press 2 and 1, first user number will be called. (Press for second user number: 2 and 2 ; for third user number: 2 and 3 ; ...for sixth user number: 2 and 6.)

8 (Press "8" until you hear long "beep" sound) 2 1

16 C. Central monitoring station (CMS) test

- I. Press "8" (test) until you hear long "beep" sound.
- II. Press 1 and 1, CMS main phone number will be called. (For CMS secondary phone number press 1 and 2.)

8 (Press "8" until you hear long "beep" sound) 1 1

SHORT PROGRAMMING TABLE

ADDRESS	FUNCTION	VALUE	DEFAULT VALUE
01 01	Time	HH MM, HH:hour ; MM:minute	00:00
01 02	Date	DD MM YY, DD:day ; MM:month ; YY:year	00/00/00
01 03	Day of the week	Monday	Read only
02 01	Entry delay	0...255 seconds	15
03 01	Exit delay	0...255 seconds	15
04 01	CMS account no.	4 digit number	0000
05 01	CMS main no.	Maximum 15 digit phone number	---
05 02	CMS secondary no.		
06 01	User phone numbers	Maximum 15 digit phone number	---
06 02	User phone-1		
06 03	User phone-2		
06 04	User phone-3		
06 06	User phone-6		
07 01	User passwords	4 digit code *If "0000" is entered, that user becomes disabled	---
07 02	User password-1		
07 03	User password-2		
07 04	User password-3		
07 05	User password-5		

* Mentioned features and settings may vary by product model. See "Installation and operation manual" for detailed information.

* Bilgi A.Ş. reserves the right to change the specifications of the goods described in the manual at any time and without prior notice.